HON F26



## Installation instructions for the locking mechanism

- 1. Remove top drawer and cradle from file.
- From the outside of the file tap out the "knockout" with a screwdriver by hammering at point X. NOTE: Wide part of screwdriver blade should be parallel to the long side of the "knockout".
- 3. Install spring in position shown by hooking one leg of spring over the lock bar. Push into place against the front and side of the file.
- 4. Assemble snap-in clip into the hole in the bell crank. Seat head of snap-in clip firmly.
- 5. Hook tab of bell crank into the slot in the lock channel. Align snap-in clip with the top hole in the front channel.
- 6. Assembly nylon lock pin into the snap-in clip as shown. Seat head firmly, tap lightly if required.
- Insert lock bracket into front of the knockout hole with hole in bracket to the top as shown. Push lock clip into slot on lock bracket as shown.
- Pivot bell crank rearward, Insert plunger lock into front of lock bracket with locking pin up, push into bracket until locking pin snaps into hole in bracket.
- 9. Allow brank crank to rotate forward so that bell crank hook engages the roll pin in the rear of the plunger lock. Lock mechanism is now ready for use.

