


1 Remove the existing lock. If you have access to the rear of the lock, simply remove the cam with a screwdriver and the large nut with a wrench or pliers. Slide the lock off the door

If you don't have access to the rear of the lock (e.g., lost keys), drill out the center of the lock with a 1/8" diameter drill bit until the internal mechanism is broken. After the internal mechanism is drilled out, insert a screwdriver into the key way and force the lock open. Remove the lock as described above.

Lock Replacement Instructions SERIES 5120

2 Insert the new lock into the door hole and secure using the large nut. You may need to unlock the lock to fit it into the hole with the cam on.

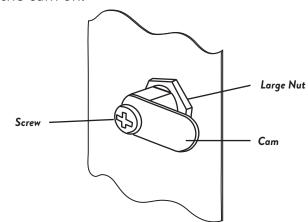

Questions, Comments, Concerns?

www.architecturalmailboxes.com

support@architecturalmailboxes.com

Need keys? Visit us at...

www.architecturalmailboxes.com/keys

Find us on social media!







ulc @archmailboxes